


# Doro PhoneEasy<sup>®</sup> 516


English

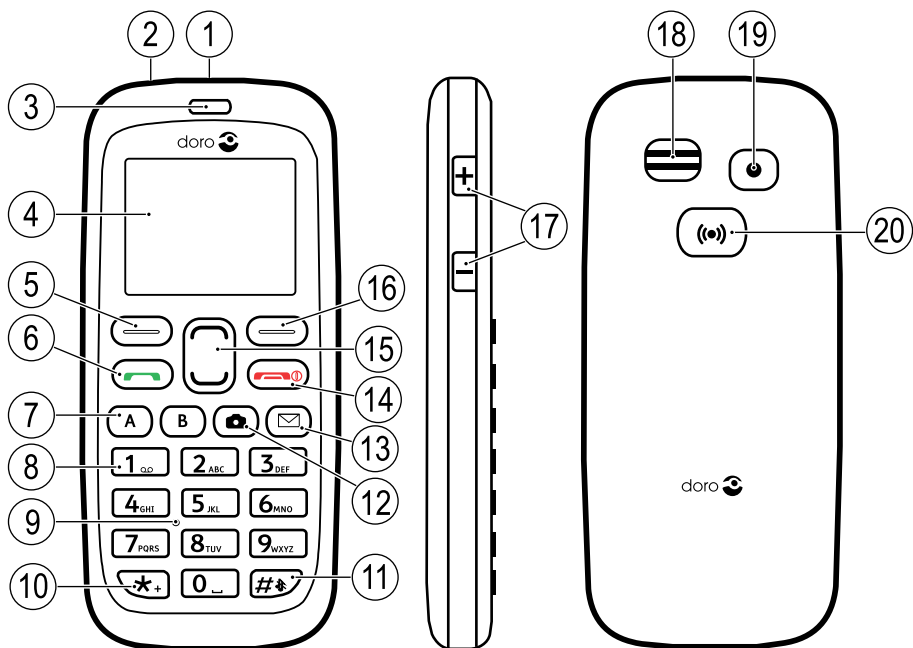






**Note!** All illustrations are for illustrative purposes only and may not accurately depict the actual device.

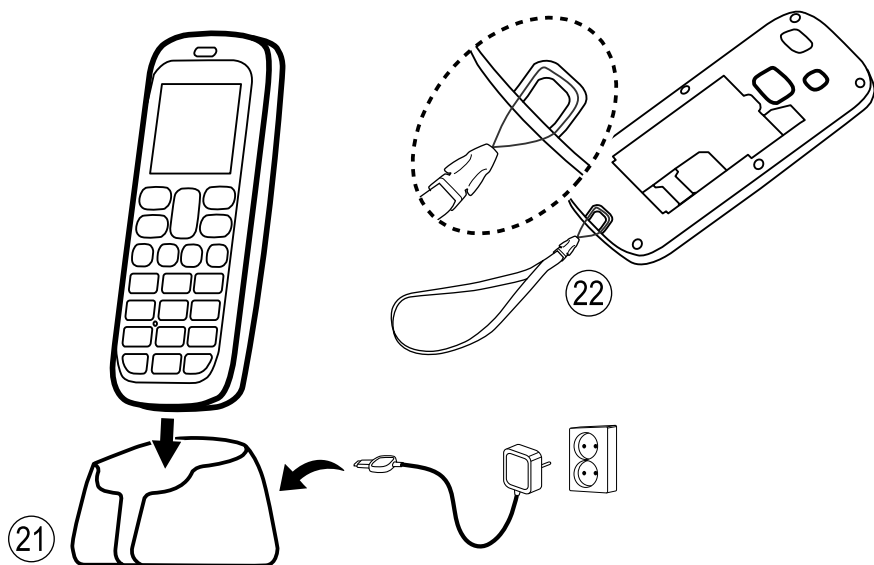





- |                          |                                   |
|--------------------------|-----------------------------------|
| 1. Charging socket       | 13. Message shortcut              |
| 2. Headset socket        | 14. End call/ <b>Power on/off</b> |
| 3. Earpiece              | 15. Arrow buttons                 |
| 4. Display               | 16. Right selection button        |
| 5. Left selection button | 17. Volume control                |
| 6. Call button           | 18. Loudspeaker                   |
| 7. Speed dials           | 19. Camera lens                   |
| 8. Voice mail            | 20. Assistance button             |
| 9. Microphone            | 21. Charging stand (not included) |
| 10. Keypad lock          | 22. Lanyard (not included)        |
| 11. Silent/Input method  |                                   |
| 12. Camera shortcut      |                                   |



The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

# Contents

Congratulations on your purchase .....	1
Get started .....	1
Insert SIM card, memory card and the battery .....	1
Charge the phone .....	2
Get to know your phone .....	3
Assistive functions .....	3
Turn the phone on and off .....	3
Start-up wizard .....	3
Navigate the phone  .....	4
Enter text  .....	5
Phone settings .....	6
Calls .....	8
Make a call .....	8
Call from the phonebook .....	8
Receive a call .....	8
Volume control .....	8
Call options .....	9
Speed dial  .....	10
SOS calls .....	10
Call log .....	10
Call settings .....	11
Phonebook .....	13
Add contact .....	13
Manage phonebook contacts .....	14
Phonebook settings .....	15
Assistance button .....	18
Make an assistance call .....	18
Activation .....	19
Number list .....	19
Activate text messages (SMS) .....	20
Assistance settings .....	20
Messages .....	21
Create and send text message (SMS) .....	21
Create and send picture message (MMS) .....	21
Create and send voice message .....	22
Inbox, Outbox and Sent .....	22

Message settings .....	23
Camera.....	27
Camera.....	27
Video camera.....	28
Picture gallery and Video gallery .....	28
Camera settings .....	29
Connectivity .....	30
Bluetooth® .....	30
Network setup .....	31
Connect the phone to a computer .....	32
File manager.....	33
Sound & Display .....	34
Audio setup  .....	34
Tone setup (ringtone) .....	34
Ringtone volume  .....	34
Silent .....	34
Alert type .....	35
Extra tone.....	35
Wallpaper.....	35
Text size  .....	35
Idle display.....	36
Themes  .....	36
LCD backlight.....	36
Brightness  .....	36
Additional functions .....	36
FM radio .....	36
Calculator.....	38
Status .....	38
Alarm .....	38
Calendar.....	39
Daily reminder .....	39
Notes.....	40
Display status symbols .....	40
Display main symbols .....	41
Reset settings.....	41
Remote configuration.....	43
Remote configuration settings on Doro PhoneEasy® 516  .....	43
Instructions for the remote user .....	44

---

Troubleshooting .....	46
Safety instructions.....	48
Network services and costs.....	48
Operating environment .....	48
Medical units .....	48
Areas with explosion risk .....	49
Li-ion battery .....	49
Protect your hearing.....	49
Emergency calls.....	50
Vehicles.....	50
Care and maintenance .....	50
Warranty.....	51
Copyright and other notices.....	51
Content copyright .....	52
Specifications .....	52
Specific Absorption Rate (SAR) .....	52
Declaration of Conformity .....	52

## Congratulations on your purchase


Easy to use camera phone Doro PhoneEasy® 516 in classic, bar style format with separated keys and direct memories that make calling easier. There's an SMS shortcut key and predictive text to simplify messaging. Share photos and even video, and enjoy enhanced sound plus long battery life. For more information about accessories or other Doro products please visit [www.doro.com](http://www.doro.com).

## Get started

### Insert SIM card, memory card and the battery

#### IMPORTANT!

Turn off the phone and disconnect the charger before removing the battery cover.

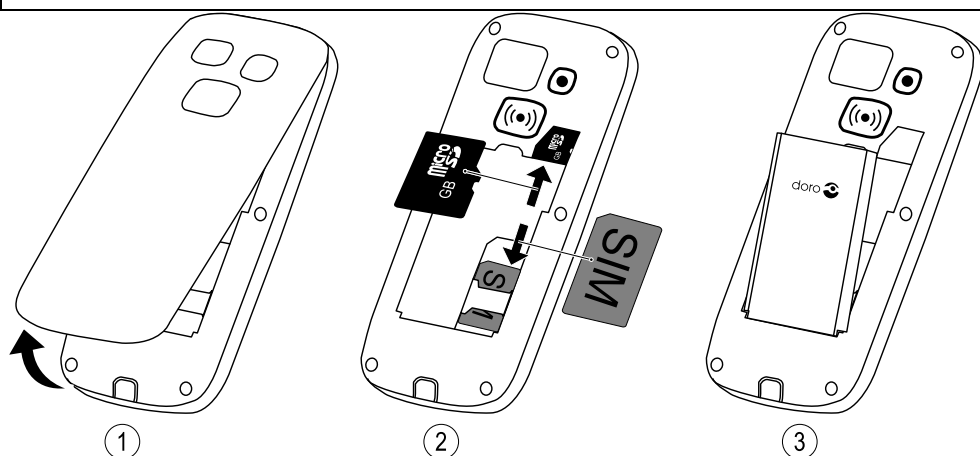

1. Remove the battery cover and the battery if it is already installed.
2. Insert the SIM card by gently sliding it into the holder. Make sure that the SIM card's contacts are facing inwards and that the cut off corner is pointing upwards. Take care not to scratch or bend the contacts on the SIM card.
3. Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the right.
4. Replace the battery cover.

**IMPORTANT!**

Use only compatible memory cards for use with this device. Compatible card type: **microSD, microSDHC**.

Incompatible cards may damage the card itself, the device and corrupt data stored on the card. Depending on the market some phones may have a pre-installed memory card.

**IMPORTANT!**

Use only compatible memory cards for use with this device. Compatible card type: **microSD, microSDHC**.





Incompatible cards may damage the card itself, the device and corrupt data stored on the card. Depending on the market some phones may have a pre-installed memory card.

## Charge the phone

**CAUTION**

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phones type approval and guarantee.

When the battery is running low,  is displayed and a warning signal is heard.

1. Connect the mains adapter to a wall socket and to the charging socket . The battery charge indicator is animated while charging. It takes approximately 3 hours to fully charge the battery. When the charger is connected to the phone,  is displayed briefly, and  when it is disconnected.
2. When charging is completed,  is displayed on the screen. If the phone is turned off when the charger is connected to the phone only the battery charge indicator will be shown on the display.

**Note!** To save power the LCD backlight goes off after a while. Press any button to illuminate the display. Full battery capacity will not be reached until the battery has been charged 3–4 times. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use.



## Save energy

When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall socket.

## Get to know your phone

### Assistive functions

Use the symbols below to guide you through supporting sections in the manual.



Seeing



Handling






Hearing



Safety

### Turn the phone on and off

1. Press and hold  on the phone to turn it on or off. Confirm with **Yes** to power off.
2. If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN** is displayed. Enter the PIN code and press **OK** ( upper left corner of keypad). Delete with **Clear** ( upper right corner of keypad).

**Note!** If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

**Tip:** It is recommended to remove the protective plastic film from the display to enhance the visibility.

**Attempts: #** shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must then be unlocked with the PUK code (Personal Unblocking Key).

1. Enter the PUK code and confirm with **OK**.
2. Enter a new PIN code and confirm with **OK**.
3. Re-enter new PIN code and confirm with **OK**.

### Start-up wizard

When starting the phone for the first time, you can use the Start-up wizard to set some basic settings.

- Press **Yes** to change or **No** if you do not want to change.



 
The default language is determined by the SIM card. See [Phone settings, p.6](#) on how to change language, time and date.

**Tip:** You can run the start-up wizard later if you want. From standby mode, press **Menu** → **Settings** → **General** → **Start-up wizard**.

## Navigate the phone



### Standby (idle mode)

When the phone is ready to use, and you have not keyed in any characters, the phone is in standby.

 

- Press  to return to standby mode.
- Press left selection button  to access the phone **Menu** or right selection button  **Name** to access your saved contacts in the phonebook.

**Tip:** You can always press  to return to standby.

### Scroll

- Use the arrow buttons / to scroll in menus.

### Step-by-step instructions

The arrow (→) indicates next action in step-by-step instructions. To confirm an action, press **OK**. To select an item, scroll or highlight the item using / and then press **OK**.

Example:

- Press **Menu** → **Phonebook** → **-New contact-** → **Add**.

To perform the example on your Doro PhoneEasy® 516 you should do the following:

1. Press **Menu**, scroll to **Phonebook** and press **OK**.
2. Select **-New contact-** and press **Add**.

## Enter text

### Enter text manually

#### Select character

- Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.

#### Special characters/smileys

1. Press **\*** for a list of special characters.
2. Select the desired character with  $\swarrow/\searrow$  and press **OK** to confirm.

#### Move the cursor within text

- Use the side buttons **+/-** or  $\swarrow/\searrow$  to move the cursor within the text.

#### Upper case, lower case and numerals

- Press **#** to choose between upper case, lower case and numerals. See [Input mode, p.6](#).

#### Change writing language

1. Press and hold **#** for a list of available languages.
2. Select language with  $\swarrow/\searrow$  and press **OK** to confirm.

#### Enter text with predictive text

In some languages you can use the Smart ABC (eZiType™) input method which uses a dictionary to suggest words.

- Press each key **once**, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed.

#### Example

1. Press **3**, **7**, **3**, **3** to write the word “Fred”. Complete the word before looking at the suggestions.
2. Use  $\swarrow/\searrow$  to view the suggested words.
3. Press **Select** and continue with the next word.  
Alternatively, press **0** to continue with the next word.
4. If none of the suggested words are correct, use manual input mode.

**Note!** See [Predictive text, p.23](#) for more information.

## Input mode

- Press **#** to change input mode. The icon on the top left of the display indicates the input mode.

<input checked="" type="checkbox"/> <b>Abc</b>	Sentence case with predictive text
<input checked="" type="checkbox"/> <b>ABC</b>	UPPER CASE with predictive text
<input checked="" type="checkbox"/> <b>abc</b>	lower case with predictive text
<b>Abc</b>	Sentence case
<b>ABC</b>	UPPER CASE
<b>abc</b>	lower case
<b>123</b>	Numerals

## Phone settings

### Time & date

#### Set the time and date

- Press **Menu** → **Settings** → **General** → **Time & date**:
  - Set time** to enter the time (HH:MM).
  - Set date** to enter the date (DD/MM/YYYY).
- Press **OK** to confirm.

**Tip:** You can also set the phone to automatically update the time and date according to the current time zone. In **Time & date** select **Auto time** → **On**. Automatic update of date and time does not change the time you have set for the alarm clock or the calendar. They are in local time. Updating may cause some alarms you have set to expire depending on network support and subscription.

#### Set the time and date format

- Press **Menu** → **Settings** → **General** → **Time & date** → **Set format**:
  - Time format** → **12 hours** or **24 hours**.
  - Date format** and select the desired date format.
- Press **OK** to confirm.

### Language

The default language for the phone menus, messages, etc. is determined by the SIM card. You can change this to any other language supported by the phone.

1. Press **Menu** ➔ **Settings** ➔ **General** ➔ **Language**.
2. Use ⏮/⏭ to select a language.
3. Press **OK** to confirm.

### Block function

1. Press **Menu** ➔ **Settings** ➔ **General** ➔ **Block function**.
2. Select each function you want to disable and press **Off**.
3. Press **Done** to confirm.

### PIN code options

1. Press **Menu** ➔ **Settings** ➔ **Security** ➔ **SIM lock**:
  - **On** to activate the PIN code. You need to enter the PIN code every time the phone is started.
  - **Off** to deactivate the PIN code.

#### IMPORTANT!

If enabling Off-mode and the SIM card is lost or stolen, it is unprotected.

- **Automatic** to start the phone without the PIN code. The phone remembers it automatically, but if the SIM card is moved to another phone (lost or stolen) the PIN code needs to be entered when the phone is started.
2. Press **OK** to confirm.

### Change PIN code

1. Press **Menu** ➔ **Settings** ➔ **Security** ➔ **Passwords** ➔ **PIN**.
2. Enter current PIN code and press **OK**.
3. Enter new PIN and press **OK**. Repeat to confirm.

### Phone lock



The phone lock protects your phone from unwanted usage. If activated, phone is locked after restart and the phone code needs to be entered to unlock.


1. Press **Menu** ➔ **Settings** ➔ **Security** ➔ **Phone lock**.
2. Select **On** to enable, or **Off** to disable.
3. Press **OK** to confirm.

**Note!** You need to enter current phone code. Default phone code is **1234**.






## Calls

### Make a call




1. Enter the phone number including the area code. Delete with **Clear**.
2. Press  to make a call. Press **Abort** to cancel the call.
3. Press  to end the call.

**Tip:** For international calls, always use **+** before the country code for best operation. Press  twice for the international prefix **+**.

### Call from the phonebook


 
1. Press **Name** to open the phonebook.
2. Use / to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the entry, see Enter text , p.5.
3. Press **Call** to dial the selected entry. If needed, select the number. Alternatively, press  to dial.
4. Press **Abort** or  to cancel the call.


### Receive a call

1. Press  to answer, or press **Silent** to switch off the ringsignal and then **Reject** to reject the call (busy signal).  
Alternatively, press  to reject the call directly.
2. Press  to end the call.

### Volume control

#### During a call

- Use the side buttons **+/-** or / to adjust the sound volume. The volume level is indicated on the display.

If you use a hearing aid or have hearing difficulties when using the telephone in a noisy environment, you can adjust the phone's audio settings, see Audio setup , p.34.

### Silent

Silent is a fixed profile with Keypad tone, Message tone and Ringtone disabled, while Vibration, Tasks, Daily reminder and Alarm are unchanged.

- Press and hold shortcut button  to activate or deactivate silent mode.

## Headset


When a headset is connected, the internal microphone in the phone is automatically disconnected. If available, use the answer key on the headset to answer and end calls.




### CAUTION

Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset.

## Call options



During a call the selection buttons<sup>1</sup> () give access to additional functions.

### Options (left selection button)

- **Hold single call** or **Retrieve single** to hold or retrieve the current call.
- **End single call** to end the current call (same as .
- **New call** to call another number (Conference).
- **Phonebook** to search the phonebook.
- **Messages** to write or read text messages.
- **Mute** to disable the microphone.

### SPK on (right selection button)

The loudspeaker allows you to speak without holding the phone closely to the ear.

1. Press **SPK on** to activate. Speak clearly into the phone microphone at a maximum distance of 1 m. Use / to adjust the loudspeaker volume.
2. Press **SPK off** to return to normal mode.

**Note!** Loud background noises (music, etc.) may interfere with the sound quality.

---

1. Selection buttons have multiple functions. The current function is shown above the selection button on the display.

## Speed dial

Use **A**–**B**, **0** and **2**–**9** to speed dial an entry from standby.


- Press and hold the corresponding key to speed dial.

### Add speed dial numbers

1. Press **Menu** → **Settings** → **Phonebook** → **Speed dial**.
2. Select **A** → **Add** and select an entry from the phonebook.
3. Press **OK** to confirm.
4. Repeat to add speed dial entries for buttons **B**, **0**, **2**–**9**.


**Tip:** To edit or delete an existing entry, select it and press **Options** → **Edit** or **Delete**.




## SOS calls





As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

## Call log

Received, missed and made calls are saved in a combined  call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

1. Press .  
Alternatively, press **Menu** → **Call log**.
2. Use / to select:
 

	Received call
	Dialled call
	Missed call
3. Press  to call, or **Options**:
  - **View** to show details for the selected call.
  - **Send SMS** to send a text message.
  - **Send MMS** to send a picture message.
  - **Delete** to delete the call.



- **Delete all** to delete all calls in the call log.
- **Save** to save the number in the phonebook → **Create new** create new contact, or **Update** update existing contact.


## Call settings

### Call time

During a call, the duration of the call is shown. You can check the duration of your calls.

1. Press **Menu** → **Settings** → **Calls** → **Call time**:
  - **Last call** to show the elapsed time of the most recent call.
  - **Outgoing calls** to show the elapsed time of all made calls.
  - **Received calls** to show the elapsed time of all received calls.
  - **Reset all** → **Yes** to reset all.
2. Press **OK** to confirm.

### Answer mode

1. Press **Menu** → **Settings** → **Calls** → **Answer mode**.
2. Select **Any key** → **On** to be able to answer incoming calls by pressing any button (exemption .
3. Press **OK** to confirm.

### Caller ID

Display or hide your phone number on the recipient's phone when you call.

1. Press **Menu** → **Settings** → **Calls** → **Call setup** → **Caller ID**:
  - **Set by network** to use default setting by the network.
  - **Hide ID** to never show your number.
  - **Send ID** to always show your number.
2. Press **OK** to confirm.

### Call waiting

You can handle more than one call at a time, put the current call on hold and answer the incoming call. When activated, an alert tone is heard if there is an incoming call while talking.

- During a call, press **Options** → **Answer**.

---

## Activate call waiting

1. Press **Menu** → **Settings** → **Calls** → **Call setup**.
2. Select **Call waiting** → **Activate**.
3. Press **OK** to confirm.

**Tip:** Repeat and select **Deactivate** to disable call waiting, or **Query status** to display if call waiting is active or not.

## Call divert

You can divert calls to an answering service or to another phone number. Set up which calls should be diverted. Select a condition and press **OK**, then select **Activate**, **Deactivate** or **Query status** for each.

1. Press **Menu** → **Settings** → **Calls** → **Call setup** → **Call divert**:
  - **Voice calls** to divert all voice calls.
  - **Unreachable** to divert incoming calls if the phone is turned off or out of range.
  - **No reply** to divert incoming calls if unanswered.
  - **If busy** to divert incoming calls if the line is busy.
  - **Cancel diverts** to cancel all call divert settings.
2. Press **OK** to confirm.

## Call barring

Your phone can be restricted to disallow certain types of calls.

**Note!** A password is needed to apply call barring. Contact your service provider to get the password.

1. Press **Menu** → **Settings** → **Calls** → **Call setup** → **Call barring**.
2. Select **Outgoing calls**:
  - **All calls** to answer incoming calls but not calling.
  - **Internat.calls** to block calls to international numbers.
  - **Int. except home** to block international calls except to the country associated with the SIM card.
3. Press **OK** to confirm.
4. Select **Incoming calls**:
  - **All calls** to call but not to receive incoming calls.


- **When roaming** to block incoming calls while roaming (operating in other networks).
5. Press **OK** to confirm.
  6. Select **Cancel all** to cancel all call barring (password needed). Press **OK** to confirm.

### Fixed dial (FDN)


You can limit calls to certain numbers saved on the SIM card. The list of allowed numbers is protected by your PIN2-code.

**Note!** A password is needed to apply fixed dial. Contact your service provider to get the password.






1. Press **Menu** → **Settings** → **Security** → **Fixed dial**:
  - **Mode** → **On** to enable or **Off** to disable.
  - **Fixed numbers** → **Add** and enter the first allowed number. Alternatively, select an entry and press **Options** → **Add**, **Edit** or **Delete**.
2. If needed, enter PIN2 and press **OK** to confirm.


**Note!** You can save parts of phone numbers. For example, if you save 01234, allows calls to all numbers starting with 01234. It is possible to place an SOS call by entering the main local emergency number followed by  even when fixed dial is activated. When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card. You are not able to send any text messages either.


## Phonebook

The  phonebook can store 300 entries with 3 phone numbers in each entry.



### Add contact

1. Press **Menu** → **Phonebook** → **-New contact-** → **Add**.
2. Enter a  **Name** for the contact, see [Enter text](#) , p.5. Delete with **Clear**.
3. Use / to select **Mobile**, **Home** or  **Office** and enter the phone number(s) including the area code.

4. Select  **Picture** → **Edit** to associate picture to the contact, see Phonebook picture, p.15.
  - **Take picture** to use the camera to take a picture.
  - **My pictures** to select an existing picture.
5. Press **Save**.

**Tip:** For international calls, always use + before the country code for best operation. Press  twice for the international prefix +.

## Manage phonebook contacts

1. Press **Menu** → **Phonebook**.
2. Select a contact, then press **Options**:
  - **View** to show details for the selected contact.  **Phone** = storage set to Phone and  **SIM** = storage set to SIM, see Phonebook storage, p.15.
  - **Edit** to edit the contact. Use ⏮/⏭ to scroll. Delete with **Clear**. When done, press **Save**.
  - **Add** to add contact.
  - **Call** to call the contact.
  - **Top 10** to set the entry as one of the first 10 contacts listed in the phonebook. See Top 10, p.16.
  - **Send SMS** to send text message. See Create and send text message (SMS), p.21.
  - **Send MMS** to send picture message. See Create and send picture message (MMS), p.21.
  - **Delete** to delete the selected contact or **Delete all** to delete all contacts. Press **Yes** to confirm or **No** to abort.
  - **Copy all** → **From SIM** to copy all phonebook contacts from the SIM card to the phone memory, or **From phone** to copy all contacts from the phone memory to the SIM card. Press **Yes** to confirm or **No** to abort.
  - **Send vCard** and select:
    - **Send by SMS** to send the selected phonebook contact as a vCard via text message. See Create and send text message (SMS), p.21.

- **Send by MMS** to send the selected phonebook contact as a vCard via picture message. See [Create and send picture message \(MMS\)](#), p.21.
- **Send by Bluetooth** to send the selected phonebook contact as a vCard via Bluetooth®. See [Bluetooth®](#), p.30.


3. Press **OK** to confirm.

## Phonebook settings

### Owner number

The phone number assigned to your SIM card is saved as **Owner number** if this is allowed by the card. You can also select to add additional numbers.

### Add numbers

1. Press **Menu** → **Phonebook** → **Owner number** → **Empty** → **Add**.
2. Enter name and number, see [Enter text](#) , p.5.
3. When done, press **Save**.

### Phonebook storage

1. Press **Menu** → **Settings** → **Phonebook** → **Storage**:
  - **SIM** to save up to 3 phone numbers and one e-mail address per contact.
  - **Phone** to save 300 contacts with 3 phone numbers each **Mobile**, **Home**, **Office**. As well as one e-mail address, and **Phonebook picture** to assign images to contacts and **Ringtone** to assign specific ringtones to contacts.
2. Press **OK** to confirm.

**Note!** Number and length of the phone numbers/contacts that can be stored will vary depending on SIM card/service provider preferences.

### Phonebook picture

You can change the phonebook view mode.

1. Press **Menu** → **Settings** → **Phonebook** → **Phonebook picture**:
  - **On** to see the contacts associate picture.
  - **Off** to display only the names of contacts.
2. Press **OK** to confirm.

## Voice mail

If your subscription includes an answering service, callers can leave a voice mail message when you are unable to answer a call. **Voice mail** is a network service and you may need to subscribe to it first. For more information and for the voice mail number, contact your service provider.

1. Press **Menu** ➔ **Settings** ➔ **Phonebook** ➔ **Voice mail**:
2. Select **Empty** ➔ **Add**:
  - **Phonebook** to add a contact from the Phonebook. Press **OK** to confirm.
  - **Manual** and enter name and number.
3. Press **OK** to confirm.


To edit or delete an existing entry, select it and press **Options** ➔ **Edit** or **Delete**.



## Call voice mail

- Press and hold shortcut button **1**.

**Tip:** If activated reminder in the Messages settings, a reminder signal will be heard after 10 minutes if not listening to new voice mail messages.

## Top 10


Set an entry as one of the first  10 contacts listed in the phonebook.

1. Press **Menu** ➔ **Settings** ➔ **Phonebook** ➔ **Top 10**.
2. Select one of the empty entries and press **Add**.
3. Use / to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the entry.
4. Press **OK** to save the selected entry, or press **Back** to discard changes.




To edit or delete an existing entry, select **Options** ➔ **Edit** or **Delete**.

**Tip:** You can also add an  entry from the phonebook. Select the contact and press **Options** ➔ **Top 10**.

## ICE (In Case of Emergency)

First responders can access additional information such as medical information from the victim's phone  **ICE** in case of emergency. In the event

of a trauma, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.

1. Press **Menu** → **Phonebook** → **ICE**.
2. Use / to scroll the list of entries.
3. Press **Edit** to add or edit information in each entry, see Enter text , p.5. Delete with **Clear**.

## ID

- **Name:** enter your name.
- **Birth:** enter your date of birth.
- **Height:** enter your height.
- **Weight:** enter your weight.
- **Address** enter your home address.
- **Language:** enter your preferred language.
- **Insurance:** enter your insurance provider and policy number.

## Contact 1:, Contact 2: and Doctor:

- Press **Options** to **Add** or **Delete** a contact from the phonebook, or **Save** to accept the current entry.  
If possible, add your relationship to your ICE contacts in the phonebook, such as “ICE Wife Mary Smith”.

## Important info.

- **Condition:** enter any medical conditions or medical devices (e.g. diabetic, pacemaker).
  - **Allergies:** enter any known allergies (e.g. penicillin, bee stings).
  - **Blood type:** enter your blood type.
  - **Vaccination:** enter any relevant vaccination.
  - **Medication:** enter any medication that you are treated with.
  - **Other info:** enter other information (e.g. organ donor, living will, consent to treat).
4. When done, press **Save**.

## Assistance button





### CAUTION

When an assistance call is activated the phone is pre-set to handsfree or speakerphone mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

The assistance button allows easy access to contact your predefined help numbers (Number list) should you need help. Make sure that the assistance function is activated before use, enter recipients in the numbers list and edit the text message.

### Make an assistance call

1. When help is needed, press and hold the assistance button for 3 seconds, or press it twice within 1 second.  
The assistance call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pressing .
2. An assistance text message (SMS) is sent to all recipients.
3. The first recipient in the list is called. If the call is not answered within 25 seconds, the next number is called. Calling is repeated 3 times or until the call is answered, or until  is pressed.

**Note!** Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number. Programming '999' into the assistance button is blocked.

**Tip:** The assistance function may be configured so that the recipient of the call must press **0** (zero) to confirm, in order to stop the alarm sequence. See Confirm with "0", p.20.



**IMPORTANT!**

Information to the recipient of an assistance call, when Confirm with "0" is activated.

- After receiving the assistance message, each number in the Number list is called sequentially.
- To confirm the assistance call, the recipient needs to press **0**.
  - If the recipient doesn't press **0** within 60 seconds (after answering) the call will be disconnected and the next number in the sequence will be called.
  - If the recipient presses **0** within 60 seconds, the call is confirmed and no further call attempts will be made (assistance sequence interrupted).

## Activation

Select how to activate the assistance function using the assistance button.

1. Press **Menu** ➔ **Settings** ➔ **Assistance** ➔ **Activation**:
  - **On Normal** to press and hold the button for approximately 3 seconds, or press it twice within 1 second.
  - **On (3)** to press the button 3 times within 1 second.
  - **Off** to disable the assistance button.
2. Press **OK** to confirm.

## Number list

Add numbers to the list that is called when the assistance button is pressed.

**IMPORTANT!**

Always inform recipients in the **Number list** that they are listed as your assistance contacts.

1. Press **Menu** ➔ **Settings** ➔ **Assistance** ➔ **Number list**.
2. Select **Empty** ➔ **Add** ➔ **Phonebook** to add a contact from the phonebook.  
Alternatively, press **Manual** to add names or numbers manually. See Add contact, p.13.
3. Press **OK** to confirm.

4. Repeat until you have 5 contacts (maximum).

**Tip:** To edit or delete an existing entry, select it and press **Options** → **Edit** or **Delete**.


## Activate text messages (SMS)

A text message can be sent to the contacts in the numbers list when the assistance button is pressed.

### Activation

1. Press **Menu** → **Settings** → **Assistance** → **SMS** → **Activation**:
  - **On** to send a text message before calling.
  - **Off** to call without sending a text message first.
2. Press **OK** to confirm.

### Create assistance message

1. Press **Menu** → **Settings** → **Assistance** → **SMS** → **Message**.
2. Select **Edit** and write the message, see Enter text , p.5.
3. Press **OK** to confirm.

**Note!** You **must** write a message if you activate the SMS function.

## Assistance settings

### Confirm with "0"

You can activate the Confirm with "0" function. This is especially recommended if there is a risk that the assistance call is answered by a voice mail or answering service. If the recipient doesn't press **0** within 60 seconds the call will be disconnected and the next number in the sequence will be called. If the recipient presses **0** within 60 seconds, the call is confirmed and no further call attempts will be made (assistance sequence interrupted).

1. Press **Menu** → **Settings** → **Assistance** → **Confirm with "0"**.
2. Select **On** to enable, or **Off** to disable.
3. Press **OK** to confirm.

### Signal type

Select the notification signal type for the assistance sequence.

1. Press **Menu** → **Settings** → **Assistance** → **Signal type**:


- **High** to use loud signals (default).
- **Low** to use one low signal.
- **Silent** no sound indication, like a normal call.


2. Press **OK** to confirm.

## Messages

### Create and send text message (SMS)


**Note!** Before you can send any text messages, you need to save your message centre number. The number to your service centre is supplied by your service provider and is usually set on the SIM card. If not, you can enter the number yourself. See [SMS centre, p.24](#).

1. Press **Menu** → **Messages** **Create new** → **SMS**.
2. Write your message, see [Enter text](#) , p.5, then press **To**.
3. Select a recipient from **Phonebook**.  
Alternatively, select **Enter number** to add recipient manually and press **Done**.
4. Press **Add** to add more recipients.  
You can modify the recipients by selecting one, press **Options** → **Edit**, **Delete** or **Delete all**.
5. Press **Send** to send.

**Note!** If you choose to add multiple recipients, you will be charged for each recipient (maximum 10). For international calls, always use + before the country code for best operation. Press  twice for the international prefix +.

### Create and send picture message (MMS)

A picture message can contain text and media objects such as pictures, sound recordings and video. Both you and the recipient must have subscriptions that support picture message. The settings for picture message are supplied by your service provider and can be sent to you automatically via text message. If not, see [MMS settings, p.25](#) on how to set your MMS profile.

1. Press **Menu** → **Messages** → **Create new** → **MMS**.
2. Write your message, see [Enter text](#) , p.5.
3. Press **Options** → **Add picture**:

- **My pictures** to select a file.
- **Take picture** to use the camera to take a picture.

**Note!** If you add more than one picture, the following pictures are increasingly compressed by the phone (scaled down). This to allow you to send more pictures in one message. To keep best picture quality, send only one picture per message.

You can also **Add sound** and **Add video** using the **Options** menu.

4. Press **Options** ➔ **Add subject** and enter your subject, then press **Done**.
5. Press **Options** ➔ **To** and select recipient from **Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **Done**.
6. Press **Add** to add more recipients.
7. Press **Send** to send.

## Create and send voice message

A voice message uses the same technology as a picture message. Both you and the recipient must have subscriptions that support picture message. The settings for picture message are supplied by your service provider and can be sent to you automatically via text message. If not, see MMS settings, p.25 on how to set your MMS profile.

1. Press **Menu** ➔ **Messages**.
2. Select **Create new** ➔ **Voice message**.
3. Recording starts immediately. Press **Stop** when done and press **Yes** to save.
4. Select recipient from **Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **Done**.
5. Press **Add** to add more recipients.
6. Press **Send** to send.

## Inbox, Outbox and Sent

1. Press **Menu** ➔ **Messages**.
2. Select **Inbox**, **Outbox** or **Sent**.
3. Select a message and press **Read**. Use ⏮/⏭ to scroll up or down.

---

#### 4. Press **Options**:

- **View** (MMS only) to view the message.
- **Call** to call the contact.
- **Resend** to send again to the same recipient.
- **Reply** to write your reply, then press **Send**. The message is sent immediately.
- **Delete** to delete. Press **Yes** to delete or **No** to return.
- **Download** or **Cancel download**. If the message is not downloaded yet, press **Download**.
- **Edit** to edit the message, then press **Send**.
- **Forward** to forward the message. Edit the message (if desired), then press **Send**.
- **Use number** to display all phone numbers contained in the message as well as the sender's number.
  - **Options** → **Call** to call the selected number.
  - **Options** → **Save** to save the number in the phonebook.
  - **Options** → **Send SMS** to write a new text message.
  - **Options** → **Send MMS** to write a new picture message.
- **Save objects** (MMS only) to save text and media objects such as pictures, sound recordings and video.
- **Details** (MMS only) to view details of the message.

#### 5. Press **OK** to confirm.

## Message settings

### Predictive text

1. Press **Menu** → **Settings** → **Messages** → **Predictive text**.
2. Select **On** to enable, or **Off** to disable.
3. Press **OK** to confirm.

### Writing language

1. Press **Menu** → **Settings** → **Messages** → **Writing language**.
2. Use **↵/↶** to select a language.
3. Press **OK** to confirm.

## Write speed

You can change the speed at which keypad characters repeat before the cursor moves on to the next character.

1. Press **Menu** → **Settings** → **Messages**.
2. Select **Write speed** → **Slow**, **Normal** or **Fast**.
3. Press **OK** to confirm.

## SMS settings

- Press **Menu** → **Settings** → **Messages** → **SMS settings**.

## Memory status

1. From **SMS settings**, select **Memory status** to display the memory space used on the SIM card and in the phone memory. Phone memory can store up to 200 messages.
2. Press **Back** to return.

## Storage

1. From **SMS settings**, select **Storage**:
  - **SIM** (default) to store messages on the SIM card.
  - **Phone** to store messages in the phone memory.
2. Press **OK** to confirm.

## SMS centre

1. From **SMS settings**, select **SMS centre** → **Edit**.
2. Enter the service centre number. Press **Clear** to delete.
3. Press **OK** to confirm.

## Cell broadcast

You can receive messages on various topics from your service provider, such as weather or traffic conditions in a particular region. For available channels and relevant channel settings, contact your service provider. Cell broadcast messages cannot be received when the device is roaming.

1. From **SMS settings**, select **Cell broadcast**:
  - **Function on/off** to turn information **On** or **Off**.
  - **Read messages** to read the message.
  - **Languages** to select language **On** or **Off**.

- **Channel settings** to select from which channels to receive or subscribe messages. Use the options **Subscribe**, **Cancel subscription**, **Add**, **Edit** and **Delete** to define your channels.

2. Press **OK** to confirm.

## MMS settings

- Press **Menu** ➔ **Settings** ➔ **Messages** ➔ **MMS settings**.

## Memory status

1. From **MMS settings**, select **Memory status** to display the memory space used on the memory card (if inserted) and in the phone memory. Phone memory can store up to 100 MB.
2. Press **Back** to return.

## Storage

Picture messages are saved by default in the phone memory. When the memory becomes full you will need to either delete a picture message (see Inbox, Outbox and Sent, p.22) or select to save your picture messages to the memory card. When the memory is full you will see a message when you try to send or receive a picture message.

**Note!** Make sure to insert a compatible memory card before saving to it (see Insert SIM card, memory card and the battery, p.1). The storage menu only appears if you have inserted a card.

1. From **MMS settings** select **Storage**:
  - **Phone** to store in the phone memory.
  - **Memory card** to store picture messages to the memory card.
2. Press **OK** to confirm.

## MMS profile

These settings are needed to use the picture messages function. The settings for picture messages is supplied by your service provider and can be sent to you automatically.


1. From **MMS settings**, select **MMS profile**.
2. Select your service provider and press **Options** ➔ **Activate**.

## Add new MMS profile

Follow the steps below if your service provider is not in the list. Contact your service provider for correct settings.

1. From **MMS profile**, select **Add**:
  - **Account name** to add account name.
  - **APN** to add APN (Access Point Name).
  - **User name** to add user name.
  - **Password** to add password.
  - **Homepage** to add homepage.
  - **Connection type** use the side buttons **+/-** to select connection enter **HTTP** or **WAP**.
  - **Proxy address** to add proxy address.
  - **Proxy port** to add proxy port.
  - **User name** to add proxy user name.
  - **Password** to add proxy password.
2. Press **OK** to confirm.
3. Press **Yes** to save or **No** to exit without saving.
4. Select your new profile and press **Options** ➔ **Activate**.
5. Press **OK** to confirm.

To edit or delete an existing entry, select it and press **Options** ➔ **Edit** or **Delete**.

**Note!** Some service providers require you to send a picture message before you will be able to receive one. Send a picture message with text only to activate the service. Some service providers require that you contact them before enabling picture message for your account. Contact your service provider's Customer Service. Press  during set up to exit without saving.

## Vibration


The text message vibration alert is several short vibrations.

1. Press **Menu** ➔ **Settings** ➔ **Messages** ➔ **Vibration**.
  - **Short** (4 seconds)
  - **Long** (12 seconds)
2. Press **OK** to confirm.



**Note!** If **Alert type** is set to **Ring only** the phone will not vibrate.

## Reminder

The reminder alerts you once if you haven't checked your messages or listened to your voice mail within 10 minutes from receipt. When notified, press  to end the notification and no more reminder is heard.

1. Press **Menu** → **Settings** → **Messages** → **Reminder**.
2. Select **On** to enable, or **Off** to disable.
3. Press **OK** to confirm.

## Delivery report

You can select if you want the phone to notify you when your text message has reached the recipient.

**Note!** Contact your service provider for detailed subscription costs before activating.

1. Press **Menu** → **Settings** → **Messages** → **Delivery report**:
2. Select **On** to enable, or **Off** to disable.
3. Press **OK** to confirm.



## Camera

You can take  photos, record  videos and view your photos and videos using the  Camera menu.

## Camera

### Camera (take photos)

To get sharp photos, wipe the lens clean with a dry cloth.

1. Press shortcut button .  
Alternatively press **Menu** → **Camera** → **Camera**.
2. Press  to take photo.
3. Press **Options**:
  - **Send** → **Send by MMS**, see Create and send picture message (MMS), p.21.
  - **Send** → **Send by Bluetooth**, see Bluetooth®, p.30.
  - **Delete** to delete. Press **Yes** to confirm or **No** to return.
  - **Use** → **Wallpaper** to save as display background.

- Use ➔ **Phonebook picture** to save as phonebook contact.
4. Press **Back** to take a new photo.  
If you do not make any selection the picture is saved.

### Camera adjustments



- Use ⏮/⏭ to zoom in and out.
- Use the side buttons **+/-** to adjust EV/Light sensitivity.

**Note!** Zoom may reduce picture quality.

For more camera settings, see [Camera settings, p.29](#).

### Video camera

To get sharp videos, wipe the lens clean with a dry cloth.

1. Press **Menu** ➔ **Camera** ➔ **Video camera**.
2. Press  to start recording.
3. Press  to stop recording. Select **Yes** to save.
4. Press **Options**:
  - **Play**
  - **Send** ➔ **Send by MMS** to send as picture message.
  - **Send** ➔ **Send by Bluetooth** to send to a Bluetooth device.
  - **Delete** to delete. Press **Yes** to confirm or **No** to return.
5. Press **Back** to return.

### Video camera adjustments

- Use ⏮/⏭ to zoom in and out.
- Use the side buttons **+/-** to adjust EV/Light sensitivity.

**Note!** Zoom may reduce video quality.

For more video camera settings, see [Camera settings, p.29](#).

### Picture gallery and Video gallery

View your saved pictures  or videos .

1. Press **Menu** ➔ **Camera** ➔ **Picture gallery** or **Video gallery**.
2. Use ⏮/⏭ or the side buttons **+/-** to select a picture or video.
3. Press **Options**:
  - **View** for single view. Press **Back** to return.

Use / to play and stop the video (video only).

- **Send** → **Send by MMS** to send as picture message. See [Create and send picture message \(MMS\)](#), p.21
- **Send** → **Send by Bluetooth** to send to a Bluetooth device, see [Bluetooth®](#), p.30.
- **Delete** to delete. Press **Yes** to confirm or **No** to return.
- **Use** (picture only) → **Wallpaper** to save as display background.
- **Use** (picture only) → **Phonebook picture** to save as phonebook contact.
- **Details** to view detailed information about the file, e.g. date, size, copyright.
- **Rename** to rename picture.

4. Press **OK** to confirm.

## Camera settings

1. Press **Menu** → **Settings** → **Camera**:

- **EV information**: EV/Light sensitivity can be adjusted by pushing volume keys up & down when in camera mode.
- **Browse style** to change view. Select **Large**, **List** or **Medium**.
- **Sort by** to sort pictures and videos by **Name** or **Time**.
- **Storage** to save pictures and videos on **Phone** or **Memory card**.

**Note!** This option is only available when a compatible external memory is inserted in the device.

- **Delete all** to delete all saved pictures and videos.
- **Image size** to set as **Small** (lowest quality), **1 MP** or **2 MP** (highest quality).
- **Video camera** → **Quality** to set as **High** or **Low**.
- **Video camera** → **Record time** to set as **No limit** or **1 min**.
- **Shutter sound** → **Off**, **Low** or **High**.

2. Press **OK** to confirm.

**Note!** With higher quality, less pictures or videos can be stored in the internal memory.

If you insert a compatible external memory (micro SD) card into your Doro PhoneEasy® 516, you can change the default storage location, see

Storage, p.25. This allows you to save more files on your device, like pictures and videos.

## Connectivity

### Bluetooth®

#### IMPORTANT!

When you are not using Bluetooth connectivity, select **Function on/off** → **Off** or select **Visibility** → **Off**. Do not pair with an unknown device.

#### Activate Bluetooth

1. Press **Menu** → **Settings** → **Bluetooth** → **Function on/off**.
2. Select **On** to enable, or **Off** to disable.
3. Press **OK** to confirm.

#### Bluetooth settings

##### Visibility

1. Press **Menu** → **Settings** → **Bluetooth** → **Visibility**.
2. Select **On** to make your device visible to other devices, or **Off** to be invisible.
3. Press **OK** to confirm.

**Note!** To prevent other devices from finding your device, select **Off**. Even if you select **Off**, paired devices can still detect your device.

##### Device name

1. Press **Menu** → **Settings** → **Bluetooth** → **Device name**.
2. Enter the name your Doro PhoneEasy® 516 should appear with for other Bluetooth devices.
3. Press **Done** to confirm.

##### Search device

Search for available Bluetooth audio devices.

1. Press **Menu** → **Settings** → **Bluetooth** → **Search device**.
2. Select a device from the list and press **Pair** to connect.  
If Bluetooth is not enabled, press **Yes** to activate.
3. When connecting to another Bluetooth device you need a shared password. Enter the password and press **OK**.

##### My devices

---

Add new devices or view saved.

1. Press **Menu** ➔ **Settings** ➔ **Bluetooth** ➔ **My devices**.
2. Select a device from the list and press **Options**:
  - **Connect** or **Disconnect** to connect or disconnect with the selected device. This may require a profile, usually a headset.
  - **Rename** to change the name of the device.
  - **Delete** to delete the device from the list.
  - **Delete all** to delete all devices from the list.
  - **Security** to select an option.

### Audio path

1. Press **Menu** ➔ **Settings** ➔ **Bluetooth** ➔ **Audio path**:
  - **Phone** to answer incoming calls with the phone.
  - **Forward BT** to forward incoming calls to the Bluetooth device.
2. Press **OK** to confirm.

### Security

1. Press **Menu** ➔ **Settings** ➔ **Bluetooth** ➔ **Security**:
  - **Normal** (All paired devices are allowed full access automatically.)
  - **High** (Confirmation may be needed for full access for paired devices.)
  - **Information**
2. Press **OK** to confirm.

### Network setup

1. Press **Menu** ➔ **Settings** ➔ **General** ➔ **Network setup**:

#### Select network

- **New search** to perform new search if connection is lost.
- **Select network** to view available network, a list of available network operators is displayed (after a short delay). Select desired operator.
- **Network mode** to select another network. Select **Automatic** to select network automatically or **Manual** to select network manually.

---

### Service selection

- **GSM** service only.
- **3G** service only.
- **Automatic:** switch between **GSM** and **3G** for best service.

#### IMPORTANT!

If you set your phone to use GSM only or 3G only, you will not be able to make any calls, including emergency calls, or use other features requiring a network connection, if the selected network is unavailable.

### Network information

- View your current network settings.

### Services

This menu may contain pre-programmed services from your network provider depending on network support and subscription.

- Press **Menu** ➔ **Settings** ➔ **General** ➔ **Services**.

### Connect the phone to a computer

Connect the phone to a computer and start transferring pictures, music and other file types. All you have to do is connect a USB cable between the phone and computer. From your computer's file explorer, you can drag and drop content between your phone and the computer.

**Note!** You might not be able to transfer some copyright protected material.

### Drag and drop content between phone and a computer

1. Connect your phone to a computer using a USB cable.
2. Wait until the phone or memory card appears as external disks in the file explorer.
3. Drag and drop selected files between the phone and the computer.

**Note!** You can transfer files using a USB cable on most devices and operating systems supporting a USB Mass Storage interface.



### Disconnect the USB cable safely

1. Make sure to enable the hardware to be safely removed.
2. Disconnect the USB cable.

**Note!** Computer instructions may vary depending on your operating system. See the documentation of your computer's operating system for more information.

## File manager

Manage the contents and properties of files. You can open, delete, move, copy and rename files.

1. Press **Menu** → **Settings** → **File manager**.
2. Select **Phone** or **Memory card** → **Open**.
3. Select a folder, eg **Photos** and press **Open**.
4. Select a file and press **Options**:
  - **Play** (audio/video/music), press  to **Play** or  to **Stop**.
  - **View** (photos/images) for single view.
  - **Send** → **Send by MMS** to send as picture message or **Send by Bluetooth** to send to a Bluetooth device.
  - **Details** to view detailed information about the file, e.g. date, size, copyright protection.
  - **Use** → **Wallpaper** to save as display background or **Phone-book picture** to be used with a phonebook contact.
  - **Rename** to rename the file.
  - **Delete** to delete the file.
  - **Delete all** to delete all files in selected folder.
  - **Sort by** → **Name** or **Time**.
  - **Copy** or **Move** → **Phone** or **Memory card** → **Options** → **Open**.  
Select a folder, eg **Photos** and press **Options** → **Paste**.
5. Press **OK** to confirm.

Supported formats:

- Picture format: BMP/GIF/JPG/PNG. Photos taken with the built in camera are saved as JPG.
- Audio format: WAV/AMR/MIDI/MP3/AAC/AAC+. Recordings made with the built in sound recorder are saved as AMR.
- Video format: MP4/3GPP.

## Sound & Display

**Note!** **Silent** needs to be set to **Off** to access Tone setup, Volume, Alert type and Extra tone.

### Audio setup



If you use a hearing aid or have hearing difficulties when using the device in a noisy environment, you can adjust the audio settings.

1. Press **Menu** ➔ **Settings** ➔ **Sound** ➔ **Audio setup**:
  - **Normal** for normal hearing in normal conditions.
  - **Medium** for mild hearing impairment or use in a noisy environment.
  - **High** for moderate hearing impairment or use in a very noisy environment.
2. Press **OK** to confirm.

**Note!** Try different settings to find the one that suits your hearing the best.



### Tone setup (ringtone)

Select a ringtone with the best tone curve adjustments and frequencies to best fit your needs.

1. Press **Menu** ➔ **Settings** ➔ **Sound** ➔ **Tone setup** ➔ **Ringtone**.
2. Use / to select one of the available melodies, the melody is played.
3. Press **OK** to confirm or **Back** to discard changes.

**Tip:** Set up the **Alarm**, **Message tone**, **Keypad tone**, **Power on** and **Power off** in the same way.

### Ringtone volume

1. Press **Menu** ➔ **Settings** ➔ **Sound** ➔ **Volume**.
2. Use / to change the ringtone volume.
3. Press **OK** to confirm.

### Silent

1. Press **Menu** ➔ **Settings** ➔ **Sound** ➔ **Silent**.
2. Select **On** to enable, or **Off** to disable.



3. Press **OK** to confirm.

**Tip:** Press and hold shortcut button **#** to activate or deactivate silent mode.

## Alert type

Select to use ringtone and/or vibration for incoming calls.



1. Press **Menu** ➔ **Settings** ➔ **Sound** ➔ **Alert type**:
  - **Ring only** for ringtone only.
  - **Vib. only** for vibration only.
  - **Vib. and ring** for vibration and ringtone.
  - **Vib. then ring** to start with vibration and adds ringtone after a short while.
  - **Silent** for no sound or vibration, the display light is lit.
2. Press **OK** to confirm.

## Extra tone

You can select to enable warning and error tones to alert you of low battery power, phone and SIM card errors, etc.

1. Press **Menu** ➔ **Settings** ➔ **Sound**.
2. Select **Extra tone** ➔ **Warning** or **Error**.
3. Select **On** to enable, or **Off** to disable.
4. Press **Done** to save.

## Wallpaper

1. Press **Menu** ➔ **Settings** ➔ **Display** ➔ **Wallpaper**.
2. Use / to display available wallpapers.
3. Press **OK** to confirm.

## Text size

You can adjust the text size for the menu and messages.

1. Press **Menu** ➔ **Settings** ➔ **Display**.
2. Select **Text size** ➔ **Normal** or **Large**.
3. Press **OK** to confirm.


 
## Idle display

In standby mode the display can show clock only, clock and the service provider, or all information.

1. Press **Menu** → **Settings** → **Display**.
2. Select **Idle display** → **Clock only**, **Clock & Operator** or **All info**.
3. Press **OK** to confirm.

## Themes

You can select different themes to adjust the phone's texts and background.

1. Press **Menu** → **Settings** → **Display** → **Themes**.
2. Use / to select a theme.
3. Press **OK** to confirm.

## LCD backlight

Select the delay time for the display backlight.

1. Press **Menu** → **Settings** → **Display**.
2. Select **LCD backlight** → **15 sec.**, **30 sec.** or **1 min.**
3. Press **OK** to confirm.


## Brightness

You can adjust the brightness of the display.


1. Press **Menu** → **Settings** → **Display**.
2. Select **Brightness** → **Level 1**, **Level 2** or **Level 3**.
3. Press **OK** to confirm.



## Additional functions


### FM radio

The  **FM radio** has a frequency range from 87.5 to 108.0 MHz and 9 preset channels. To listen to the radio, you need to connect a compatible headset which acts as an antenna.



### Turning the radio on

1. Connect a headset to the headset socket .


2. Press **Menu** ➔ **FM radio**. The radio is turned on. The tuned frequency is displayed.
3. Select channel using  or .

**Tip:** Press  to return to standby mode. The radio will continue to play.

### Volume

1. Press **Menu** ➔ **FM radio** ➔ **Options** ➔ **Volume**.
2. Use  or  to adjust the volume.
3. Press **OK** to confirm.

### Save frequency



1. Press **Menu** ➔ **FM radio** ➔ **Options** ➔ **Save frequency**.
2. Enter a name for the new channel, see Enter text , p.5.
3. When done, press **Save**.

### Switch off


- Press **Menu** ➔ **FM radio** ➔ **Options** ➔ **Switch off**.

**Tip:** Disconnecting the headset will also turn off the radio.

### Loudspeaker





1. Press **Menu** ➔ **FM radio** ➔ **Options** ➔ **Loudspeaker** ➔ **On**.
2. Use  or  to adjust the sound volume.
3. To turn off, select **Off**.

### Channel list (editing the channel list)

1. Press **Menu** **FM radio** ➔ **Options** ➔ **Channel list**.
2. Select the channel you wish to edit and press **Options**:
  - **Play** to play the selected channel.
  - **Delete** to delete the channel. Press **Yes** to confirm or **No** to return to the channel list.
  - **Edit** to edit the channel name, then press  to edit the frequency, use **#** to enter the decimal point. When done, press **Save**.
3. Press **OK** to confirm.

### Manual input (changing search mode)

1. Press **Menu** ➔ **FM radio** ➔ **Options** ➔ **Manual input**:

- **Fine tune** to tune manually with  or .
- **Auto search** to use automatic station search with  or .


2. Press **OK** to confirm.


### Auto save

1. Press **Menu** → **FM radio** → **Options**.
2. Select **Auto save** to automatically install available radio stations in channels **1-9**.
3. Press **OK** to confirm.


**Note!** This will overwrite all previously saved channels.



## Calculator

The  **Calculator** can perform basic mathematical operations.

1. Press **Menu** → **Calculator**.
2. Enter the first number. Use  to enter decimal points.
3. Use the arrow buttons to select an operation (+, -, x, ÷) and press **OK**.
4. Enter the next number and press **OK**.
5. Repeat steps 2-4 as necessary.  
Select = and press **OK** to calculate the result.

## Status

Scroll through the  **Status** list to get further information about the icons shown on top of your display. Icons shown on the display varies depending on your phone status.

1. Press **Menu** → **More** → **Status**.
2. Use  or  to scroll the list.
3. Press **Back** to return to standby mode.

## Alarm

1. Press **Menu** → **Organiser** → **Alarm** → **On**.
2. Enter the alarm time using the keypad.
  - For a single occurrence, select **Single**.
  - For a repeated alarm, select **Repeated**. Scroll through the list of days and press **On** to enable or **Off** to disable the alarm for each day.
3. Press **Save** to confirm.

## Snooze or turn off


- When the alarm goes off a signal will sound. Press **Stop** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.

**Note!** The alarm will work even when the phone is switched off. Do not press **Yes** to power on if wireless phone use is prohibited or when it may cause interference or danger.

**Tip:** To edit an alarm, press **Edit** or **Off** to stop the alarm.

## Calendar

### Add task

- Press **Menu** → **Organiser** → **Calendar** → **Options** → **Add task**.
- Enter date, then press **↵**.
- Enter time, then press **↵**.
- Enter subject, see Enter text , p.5.
- When done, press **Save**.

### Options


- Press **Menu** → **Organiser** → **Calendar** → **Options**:
  - Select **View** to show tasks for the selected date.
  - Select **Jump to date** and enter the date.
- Press **OK** to confirm.

### View all

- Press **Menu** → **Organiser** → **Calendar**.
- Select a task and press **Options** → **View all**.
- Press **Options** → **Edit**, **Delete** or **Delete all**.
- Press **OK** to confirm.

**Note!** The calendar will work even when the phone is switched off. Do not press **Yes** to power on if wireless phone use is prohibited or when it may cause interference or danger.

## Daily reminder

- Press **Menu** → **Organiser** → **Daily reminder** → **Add**.
- Enter time, then press **↵**.
- Enter subject, see Enter text , p.5

4. Press **OK** to confirm.


### Snooze or turn off

- When the reminder alarm goes off a signal will sound. Press **Stop** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.

**Note!** The reminder will work even when the phone is switched off. Do not press **Yes** to power on if wireless phone use is prohibited or when it may cause interference or danger.

















 

**Tip:** For more options select an existing entry, and press **Options** → **Skip reminder**, **Add**, **Edit**, **Delete** or **Delete all**.

### Notes




























 



- Press **Menu** → **Organiser** → **Notes** → **Add**.
- Enter your note using the keypad, see Enter text , p.5.
- Press **OK** to confirm.

**Tip:** For more options select an existing entry, and press **Options** → **View** → **Edit**, **Delete** or **Delete all**.

### Display status symbols

 Signal strength	 No network coverage
 Ring only	 Data transmission
 Ring + vibration	 Alarm active
 Vibration only	 Battery level
 Silent	 Call divert activated
 Voice mail message received	 Bluetooth on, visible to others
 Missed call	 Bluetooth on, invisible to others
 Headset connected	 Bluetooth connected
 Unread picture message (MMS)	 Unread text message (SMS)

## Display main symbols

 Mute	 Charger connected
 Message sending success	 Charger removed
 Message sending failed	 Headset in
 Error	 Headset out
 Warning	 Speaker on
 Query	 Speaker off
 Done (confirmed)	 Incoming call
 New message	 Outgoing call
 Battery level low	 Call ended
 Searching	 Missed call. Press <b>Read</b> to see the missed calls.
 vCard message	 Call on-hold
 Volume control	 SOS calls only
 Processing, please wait	 Assistance button call
 Text message (SMS)/ Picture message (MMS) unread	 Text message (SMS)/ Picture message (MMS) read
 Text message (SMS)/ Picture message (MMS) unsent	 Text message (SMS)/ Picture message (MMS) sent
 Storage location is set to Phone or SIM	

## Reset settings

1. Press **Menu** ➔ **Settings** ➔ **Security**.
2. Select **Reset settings** to reset the phone settings. All the changes that you have made to the phone settings will be reset to default settings.
3. Enter the phone code and press **OK** to reset.

**Tip:** The default phone code is **1234**.

**Reset all**

1. Press **Menu** ➔ **Settings** ➔ **Security**.
2. Select **Reset all** to delete phone settings and content such as contacts, number lists and messages (SIM memory is not affected).
3. Enter the phone code and press **OK** to reset.

**Tip:** The default phone code is **1234**.



## Remote configuration

Allow persons that you trust, usually a family member or friend, to send information to your Doro PhoneEasy® 516. You can receive phonebook contacts and contacts for speed dial buttons, calendar tasks and settings for the assistance button. When activated, you don't have to do anything, it's the other person that sends information to you.

### Remote configuration settings on Doro PhoneEasy® 516



#### Activation

1. Press **Menu** → **Settings** → **Security** → **Remote config** → **Activation**.
2. Select **On** to enable, or **Off** to disable.
3. Press **OK** to confirm.

#### Number list

You need to add the name and number of the people who are allowed to send information from their phone to your Doro PhoneEasy® 516.

1. Press **Menu** → **Settings** → **Security** → **Remote config**.
2. Select **Number list** → **Empty** → **Add**:
  - **Phonebook** to add a contact from the Phonebook. Press **OK** to confirm.
  - **Manual** and enter the name and number. Press **OK** to confirm
3. Repeat until you have 5 contacts (maximum).

**Tip:** To edit or delete an existing entry, select it and press **Options** → **View/Edit/Delete**.

## Instructions for the remote user

### Send remote control commands by text message

- Make sure activation is set to **On** and that the remote user is saved in the **Number list** on the Doro PhoneEasy® 516.
- Text message format **must** be **\*#Command#**, otherwise the text message cannot be identified as a remote control command.
- Always use **#**-sign to separate and to end parameters (parameters are the content you want to send).
- To avoid unintentional removal of contacts from the phonebook: contacts already in the phonebook, are duplicated (they aren't deleted or replaced).
- Max length for names is 20 characters, max length for phone numbers is 40 characters and the max length for task descriptions is 35.

**Note! Remote config received** is shown briefly on the Doro PhoneEasy® 516 to confirm successful reception of remote configurations.

### Remotely save a contact in the phonebook

All contacts sent to Doro PhoneEasy® 516 by remote configuration are stored in the phone (even if storage is set to SIM). 3 phone numbers for each contact can be sent.

<b>Example</b>	Send Jeff Jackson's mobile number, home number and his office number to Doro PhoneEasy® 516.
<b>Write</b>	*#phonebook#Jeff Jackson# +46700393939#462805011#462805083#

<b>Example</b>	Send Martha Thomson's mobile number to Doro PhoneEasy® 516.
<b>Write</b>	*#phonebook#Martha Thomson#0768991014#

### Remotely set up the assistance button

<b>Objective</b>	Activate the Assistance button function On Normal
<b>Write</b>	*#alert#a#1#

<b>Objective</b>	Activate the Assistance button function On (3)
<b>Write</b>	*#alert#a#2#

<b>Objective</b>	Deactivate the Assistance button function Off
<b>Write</b>	*#alert#a#0#

<b>Objective</b>	Store Jeff Jackson in Number list as position one (1) with phone number: +46700393939.
<b>Write</b>	*#alert#n#1#Jeff Jackson#+46700393939#

<b>Objective</b>	Enable the text message function. The text message should be: This is an assistance message. Please take appropriate actions.
<b>Write</b>	*#alert#m#1#This is an assistance message. Please take appropriate actions.#

<b>Objective</b>	Enable the Confirm with "0" function.
<b>Write</b>	*#alert#c#1#

<b>Objective</b>	Disable the Confirm with "0" function.
<b>Write</b>	*#alert#c#0#

<b>Objective</b>	Set the Signal type to low.
<b>Write</b>	*#alert#s#1#

<b>Objective</b>	Set the Signal type to high.
<b>Write</b>	*#alert#s#0#

<b>Objective</b>	Set the Signal type to silent.
<b>Write</b>	*#alert#s#2#

## Remotely set up speed dials

<b>Objective</b>	Set Jeff Jackson's mobile number in memory key <b>A</b>
<b>Write</b>	*#memorykey#a#Jeff Jackson#0700393939#

<b>Objective</b>	Set Martha Thomson in memory key <b>B</b>
<b>Write</b>	*#memorykey#b#Martha Thomson#0768991014#

## Remotely add a task in the calendar

<b>Objective</b>	Send a new calendar task to Doro PhoneEasy® 516. The task text should be: dentist appointment in December 1, 2014 at 10:30.
<b>Write</b>	*#task#20101201#1030#dentist appointment#

**Note!** Date format is written as **yyyymmdd** and time format as **hhmm**.

**Tip:** It is recommended that you write down the remote settings that you send, this way it is easier for you to send changes later.

## Troubleshooting

### Phone cannot be switched on

<b>Battery charge low</b>	Connect the power adapter and charge the battery for 3 hours. Full battery capacity is reached after the battery has been charged 3–4 times.
<b>Battery incorrectly installed</b>	Check the installation of the battery.

### Failure to charge the battery

<b>Battery or charger damaged</b>	Check the battery and charger.
<b>Battery should only be charged in temperatures between 0 °C and 40 °C</b>	Improve the charging environment.
<b>Charger incorrectly connected to phone or power socket</b>	Check the charger connections.

### Standby time decreases

<b>Battery charge capacity too low</b>	Install a new battery.
<b>Too far from base station, phone is constantly searching for signal</b>	Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone.

### Failure to place or receive calls

<b>Call barring activated</b>	Deactivate call barring. If this does not solve the problem, contact your service provider.
-------------------------------	---

### PIN code not accepted

<b>Wrong PIN code entered too many times</b>	Enter the PUK code to change the PIN code, or contact your service provider.
--	--

**SIM card error**

<b>SIM card damaged</b>	Check the condition of the SIM card. If it is damaged, contact your service provider.
<b>SIM card incorrectly installed</b>	Check the installation of the SIM card. Remove the card and reinstall it.
<b>SIM card dirty or damp</b>	Wipe the contact surfaces of the SIM card with a clean cloth.

**Failure to connect to network**

<b>SIM card invalid</b>	Contact your service provider.
<b>No coverage of GSM service</b>	Contact your service provider.

**Weak signal**

<b>Too far from base station</b>	Try again from another location.
<b>Network congestion</b>	Try calling at a later time.

**Echo or noise**

<b>Regional problem from bad network relay</b>	Hang up and redial. This may switch to another network relay.
--	---

**Failure to add a contact**

<b>Phonebook memory full</b>	Delete contacts to free up memory.
------------------------------	------------------------------------

**Failure to set a function**

<b>Function not supported or subscribed from network</b>	Contact your service provider.
--	--------------------------------

**Unable to send or receive Picture Messages / MMS with the SIM card**

<b>The MMS profile is not set automatically and it is not possible to send or receive MMS</b>	For some operators the MMS profile has to be selected manually. Activate the correct profile to suit your SIM card or network used.
---	---

## Failure to send or download MMS

<b>Phone memory is full and it is not possible to send or download MMS</b>	Delete received MMS or select to set the default storage for MMS to be saved on a memory card (not included).
<b>Incorrect MMS profile selected.</b>	For some service providers the <b>MMS profile</b> has to be selected manually.

## Safety instructions



### CAUTION

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.

The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

## Network services and costs

Your device is approved for use on the WCDMA 900/2100 MHz, GSM 900/1800/1900 MHz networks. To use the device, you need a subscription with a service provider.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

## Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

## Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply.

Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

## Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 cm between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 cm from the medical device.
- Should not carry the phone in a breast pocket.
- Hold the wireless device to the ear opposite the medical device

If you have any reason to suspect that interference is taking place, turn the phone off immediately. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

## Li-ion battery

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.



### **WARNING**

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

## Protect your hearing

This device has been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards.

**WARNING**

Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

## Emergency calls

### IMPORTANT!

Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

## Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

## Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.



- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

## Warranty

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

## Copyright and other notices

Copyright © 2013 Doro AB. All rights reserved.

Bluetooth® is a registered trademark of Bluetooth SIG, inc.

vCard is a trademark of the Internet Mail Consortium.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.

microSD is a trademark of SD Card Association.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Doro reserves the right to revise this document or withdraw it at any time without prior notice.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

To the maximum extent permitted by applicable law, under no circumstances shall Doro or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Doro does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Doro does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

## Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

## Specifications

<b>Network:</b>	WCDMA 900/2100 MHz, GSM 900/1800/1900 MHz
<b>Dimensions:</b>	119 mm x 53 mm x 14 mm
<b>Weight:</b>	93 g (including battery)
<b>Battery:</b>	3.7 V / 800 mAh Li-ion battery
<b>Operating ambient temperature</b>	Min: 0° C (32° F) Max: 40° C (104° F)
<b>Charging ambient temperature</b>	Min: 0° C (32° F) Max: 40° C (104° F)
<b>Storage temperature</b>	Min: -20° C (-4° F) Max: 60° C (140° F)

Bluetooth® is a registered trademark of Bluetooth SIG, inc.

eZiType™ is a trademark of Zi Corporation.

vCard is a trademark of the Internet Mail Consortium.

## Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.050 W/kg measured over 10 g tissue.

The maximum limit according to ICNIRP is 2.0 W/kg measured over 10 g tissue.

## Declaration of Conformity

Doro hereby declares that Doro PhoneEasy® 516 conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2011/65/EC (RoHS). A copy of the Declaration of Conformity is available at [www.doro.com/dofc](http://www.doro.com/dofc).



PhoneEasy 516 (1011)

English

Version 1.1

©2014 Doro AB. All rights reserved.  
[www.doro.com](http://www.doro.com)

**CE 0700**

REV 12289 – STR 20140605